

### P-S2 P-S2+

P-S2+: ANC主动降噪+双麦ENC通话降噪 (4\*MIC)  
P-S2: 双麦ENC通话降噪 (4\*MIC)

P-S2+: ANC active noise reduction + dual-microphone ENC call noise reduction (4\*MIC)  
P-S2: dual-microphone ENC call noise reduction (4\*MIC)

**耳机提出充电盒，耳机自动开机，并自动配对成功**  
首次使用时，L、R耳机提出充电盒，耳机白灯慢闪，其中一台耳机指示灯熄灭，另外一台指示灯慢闪、代表L、R耳自动配对成功，耳机将进入等待手机配对模式。

The earphones are taken out of the charging box, the earphones are automatically turned on, and they are automatically paired successfully.  
When used for the first time, the L and R earphones are taken out of the charging box, the earphone white light flashes slowly, the indicator light of one earphone goes out, the indicator light of the other earphone flashes slowly, indicating that the L and R earphones are automatically paired successfully, the earphones will enter the waiting mode for mobile phone pairing.

### 使用耳机 Use headphones

L、R耳机提出充电盒  
打开已解锁的手机蓝牙“开关”  
搜索蓝牙设备 P-S2 P-S2+ 点击连接即可  
Turn on the L and R earphones from the charging box  
Turn on the unlocked phone's Bluetooth "switch"  
Search for Bluetooth devices P-S2 P-S2+ Click to connect

### 充电指示灯状态 Charging indicator status

充电时：LED彩屏亮起充电图标越3秒后息屏  
充满电：LED彩屏界面显示100%电量  
When charging: the LED color screen lights up the charging icon for 3 seconds and then turns off. Fully charged: the LED color screen shows 100% power.

充电盒多功能复原按键  
Type-C接口处  
蜂鸣器  
耳机P-S2充电指示灯  
Headphones P-S2 charging indicator

### P-S2+: 入耳式耳机 P-S2+: Full-in-ear headphones

#### 左耳点触方式 Left ear touch method

暂停播放：触摸1下  
上一曲：触摸2下  
音量减：触摸3下  
接听挂断：触摸1下  
拒接电话：长按2秒  
Siri/语音助手：触摸4下  
降噪模式切换：长按2秒  
环境通透模式切换：长按2秒  
Pause | Play: Touch once  
Previous song: Touch twice  
Volume down: Touch three times  
Answer/ Hang up: Touch once  
Reject call: press and hold for 2 seconds  
Siri/Voice Assistant: Touch four times  
Noise reduction mode switch: Long press for 2 seconds  
Environmental transparency mode switch: Long press for 2 seconds

#### 右耳点触方式 Right ear touch method

暂停播放：触摸1下  
下一曲：触摸2下  
音量加：触摸3下  
接听挂断：触摸1下  
拒接电话：长按2秒  
Siri/语音助手：触摸4下  
降噪模式切换：长按2秒  
环境通透模式切换：长按2秒  
Pause | Play: Touch once  
Next song: Touch twice  
Volume up: Touch three times  
Answer | Hang up: Touch once  
Reject call: Long press for 2 seconds  
Siri/Voice Assistant: Touch four times  
Noise reduction mode switch: Long press for 2 seconds  
Environmental transparency mode switch: Long press for 2 seconds

### P-S2: 半入耳式耳机 P-S2: Semi-in-ear headphones

#### 左耳点触方式 Left ear touch method

暂停播放：触摸1下  
上一曲：触摸2下  
音量减：触摸3下  
接听挂断：触摸1下  
拒接电话：长按2秒  
Siri/语音助手：触摸4下  
Pause | Play: Touch once  
Previous song: Touch twice  
Volume reduction: Touch three times  
Answer | Hang up: Touch once  
Reject call: Long press for 2 seconds  
Siri/Voice Assistant: Touch four times

#### 右耳点触方式 Right ear touch method

暂停播放：触摸1下  
下一曲：触摸2下  
音量加：触摸3下  
接听挂断：触摸1下  
拒接电话：长按2秒  
Siri/语音助手：触摸4下  
Pause | Play: Touch once  
Next song: Touch twice  
Volume up: Touch three times  
Answer | End call: Touch once  
Reject call: Press and hold for 2 seconds  
Siri/Voice Assistant: Touch four times

### 指示灯说明 Indicator light description

低电时：提示音间隔60秒“嘀”一声  
提示一次：battery in low  
指示灯：白灯5秒闪一下  
耳机在充电中：白灯常亮  
指示灯熄灭：蓝牙连接成功  
耳机断开连接：白灯闪烁  
白灯慢闪：耳机配对状态  
一边白灯熄灭、另一边白灯慢闪：  
左右耳机配对成功

Battery low: the tone will beep at 60 seconds intervals and white light flashes once every 5 seconds  
Charging: white light always on  
Indicator light off: Bluetooth connection successful  
Bluetooth disconnect: white light flashes  
White light flash slowly: Headsets pairing status  
One ear white light off, one ear white light flash slowly: 2 earphones paired successfully

### 蓝牙耳机名称 Bluetooth search name

蓝牙耳机名称：P-S2+  
耳机拥有ANC主动降噪  
环境通透模式切换  
双麦ENC通话降噪 (4\*MIC)  
Bluetooth search name: P-S2+  
The earphones have ANC active noise reduction, environmental transparency mode switching, and dual-microphone ENC call noise reduction (4\*MIC)

### 蓝牙耳机名称 Bluetooth search name

蓝牙耳机名称：P-S2  
耳机拥有4个麦克风  
超高清双麦ENC通话降噪  
Bluetooth search name: P-S2  
The headset has 4 microphones  
Ultra-HD dual-microphone ENC call noise reduction

### 智能屏触控指令 Smart screen touch commands

按1次  
滑动

### 功能展示 function display

### 尽情享受P-S2 P-S2+产品的陪伴!

Enjoy the company of P-S2 P-S2+ products!

# monoise

### P-S2 P-S2+产品说明书

P-S2 P-S2+Pro Product Manual

### 产品介绍 Product description

触摸按键  
Touch button

指示灯  
indicator light

出音口  
Sound outlet

### 物品清单 Item list

耳机 X 4 earphone X 4

充电盒 X 1 Charging box X 1

产品说明书 X 1 Product Manual X 1

Type-C数据线 X 1 Type-C data cable X 1

### 重要安全提示 Important safety tips

○使用耳机会影响您辨别其它声音的能力。当您从事任何需要全神贯注的活动时，请谨慎使用耳机。

○本产品不是玩具——切勿让儿童玩耍本产品。如果误食包装袋本身或其中包含的许多小部件，可能会导致窒息。

○请勿尝试自行拆卸产品，或将任何不明物体插入产品中，否则可能导致短路，从而导致火灾或触电。

○避免将您的产品暴露在雨水、湿气或其他液体中，以防止产品损坏或对您造成伤害。

○请勿将耳机浸入水中。

○请勿在淋浴或沐浴时佩戴耳机，或参与水上运动，例如游泳、潜水、冲浪等。

○请在温度0°C~35°C范围内使用本设备，并在温度-20°C~+45°C范围内存放设备及其配件当环境温度过高或过低时，可能会引起设备故障。

### 重要安全提示 Important safety tips

○Using headphones can affect your ability to distinguish other sounds. Use headphones with caution when you are engaged in any activity that requires your full concentration.

○This product is not a toy - do not let children play with this product. The bag itself or the many small parts it contains may cause suffocation if swallowed.

○Do not try to disassemble the product yourself or insert any unknown objects into the product, otherwise it may cause a short circuit, resulting in fire or electric shock.

○Avoid exposing your product to rain, moisture, or other liquids to prevent damage to the product or injury to you.

○Do not immerse the earphones in water.

○Do not wear headphones in the shower or bath, or participate in water sports, such as swimming, water skiing, surfing, etc.

○Please use this device within the temperature range of 0°C~35°C, and store the device and its accessories within the temperature range of -20°C~+45°C. When the ambient temperature is too high or too low, the device may be damaged. Fault.

### 非保修条例 Non-Warranty Conditions

1. 未经授权的安装、使用、碰撞、疏忽、滥用、进液、事故、改动、不正确使用非产品配件，或撕毁、涂改标识、防伪标记；

2. 已超过保修有效期；

3. 因不可抗力造成的损坏；

4. 消费者因使用、维护、保管不当等人为原因造成损坏的；

5. 因不可抗力造成损坏的，如地震、火灾、洪水、台风等。

### 非保修条例 Non-Warranty Conditions

1. Unauthorized repairs, misuse, collisions, negligence, excessive use, liquid ingress, accidents, modifications, the use of non-original product accessories, or the removal or alteration of labels or anti-tamper markings.

2. The product has exceeded the validity period of the "Three Guarantees" (repair, replacement, and refund).

3. Damages caused by force majeure.

4. Damages caused by the consumer due to improper use, maintenance, or storage.

5. Damages caused by irresistible forces such as earthquake, fires, floods, typhoons, etc

### 合格证 Certificate of conformity

产品等级：一等品  
Product grade: first-class product

检验员：[Signature]

### 合格证 Certificate of conformity

Product grade: American product

Quality System: ISO9001:2015

Inspector: [Signature]